

Line Interactive UPS

BLAZER-600 Pro
BLAZER-800 Pro
BLAZER-1000 Pro
BLAZER-1500 Pro
BLAZER-2000 Pro



Quick Start Guide

EN

Safety – CAUTION

- This product is specially designed for PCs and it is not recommended for use in any medical equipment, life-supporting system and other specific important equipment.
- Do not plug household appliances such as hair dryers, microwave ovens or vacuum cleaners to UPS.
- Do not attach a power strip or surge suppressor to the UPS.
- Do not plug the UPS into its own output.
- Connection to any other type of receptacle other than two-pole, three-wire grounded receptacle may result in shock hazard as well as violate local electrical codes.
- To reduce risk of overheating the UPS, do not cover the UPS' cooling vents.
- This unit intended for installation in a controlled environment (temperature controlled, indoor area free of conductive contaminants). Avoid installing the UPS in locations where there is standing or running water or excessive humidity and do not use it in any of the following environments:
 - Any area with combustible gas, corrosive substance or heavy dust.
 - Any area with extraordinarily high or low temperature (above 40°C or below 0°C) and humidity of more than 90%.
 - Any area exposed to direct sunshine or near any heating apparatus.
 - Any area with serious vibrations.
 - Outdoor.
- The utility power outlet shall be near the equipment and easily accessible. In the event of an emergency, press OFF button and disconnect the power cord from the AC power supply to properly disable the UPS.
- The internal short circuiting of the UPS will lead to dangers such as electric shock or fire; therefore do not allow liquids or any foreign object to enter the UPS. No water containers (such as a water glass) or any other liquid-containing vessels shall be placed on the top of the UPS so as to avoid such dangers as electric shock.
- Please do not use the UPS in excess of the rated load capacity.
- Unplug the UPS prior to cleaning and do not use liquid or spray detergent.
- Risk of electric shock, do not attempt to disassemble the unit. No user serviceable parts inside. Refer servicing to qualified service personnel.
- If UPS is to be stored for a long time, it is recommended to recharge the batteries (by connecting the utility power to UPS, switch "ON"), once a month for 24 hours to avoid a full battery discharge.
- In case smoke is found coming out from the device, please cut off the power supply quickly and contact the distributor.
- The UPS contains one/two large-capacity batteries. So the shell shall not be opened, otherwise such dangers as electric shock will be caused. If any internal overhaul or replacement of the battery is required, please contact the distributor.
- Servicing of batteries should be performed or supervised by personnel knowledgeable of batteries and the required precautions. Keep unauthorized personnel away from batteries.
- A battery can present a risk of electrical shock and high short circuit current. The following precautions should be observed when working on batteries:
 - Remove watches, rings, or other metal objects from the hand.
 - Use tools with insulated handles and wear rubber gloves and boots.

- Do not lay tools or metal parts on top of batteries.
- Disconnect charging source prior connecting or disconnecting batteries terminals.
- When replacing batteries, replace with the same type and number of the sealed lead-acid batteries.
- Never short circuit batteries. When working with batteries, remove watches, rings and other metal objects, and only use insulated tools.
- The battery must be replaced exclusively by qualified personnel (risk of shock). Prohibit users from their own battery replacement. Contact your reseller if need.
- The maximum ambient temperature rating is 40°C.
- Do not dispose of battery or batteries in a fire. The battery may explode.
- Do not open or mutilate the battery or batteries. Released electrolyte is harmful to the skin and eyes. It may be toxic.
- Icon Φ on the rating label stands for phase symbol.
- This pluggable type A equipment with battery already installed by the supplier is operator installable and may be operated by laymen.
- During the installation of this equipment it should be assured that the sum of the leakage currents of the UPS and the connected loads does not exceed 3.5mA.
- Attention, hazardous through electric shock. Also with disconnection of this unit from the mains, hazardous voltage still may be accessible through supply from battery. The battery supply should be therefore disconnected in the plus and minus pole of the battery when maintenance or service work inside the UPS is necessary.
- In the event that there is fire occurring in the vicinity, please use dry-power extinguishers. The use of liquid extinguishers may give rise to the danger of electric shock.

1. Introduction

BLAZER Pro series is an intelligent and compact line interactive UPS (Uninterruptible Power Supply) which is designed to protect your personal computer or sensitive electronic equipments from all forms of power interference, including complete power failures. It is equipped with many features that allow any attached equipment to operate longer and more reliability.

2. Description of Features

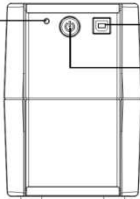 
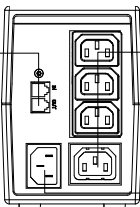 
- Easy to use and install utilized microprocessor control to maximize the reliability and efficiency
- Equipped with built-in boost and buck AVR function
- DC Cold start function
- Auto restart while AC recovery.
- Provides AC Overload protection
- RJ11/RJ45 (in/out) LAN/Modem/Phone line protection
- 2-4 hours fast charging
- Tiny-Load Sensing technology
- HID-UPS-Battery-supported USB

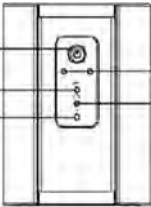 
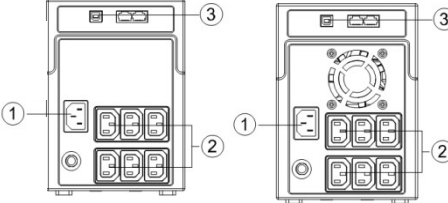 
3. Package Contents

You should have received the following items inside of package:

- UPS Unit
- User's manual
- I/P power cord
- O/P power cord
- USB cable

4. Product Overview

	Front Panel	Back Panel
600/ 800	<div><div>LED Indicators</div><div>AC mode: Green lighting Battery mode Green flashing</div><div></div><div>USB Port</div><div>Power ON/OFF</div></div>	<div><div>RJ11/Modem/ phone line protection</div><div></div><div>4x IEC Outlets</div><div>AC input</div></div>

1000/ 1500/ 2000		
------------------------	--	---

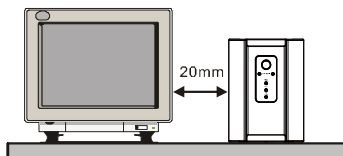 
5. Installation and Initial Startup



Before installation, please inspect the unit. Be sure that nothing is damaged.

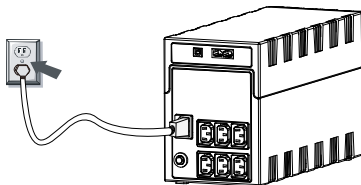 
I: Placement & Storage Conditions

Install the UPS in a protected area that is free of excessive dust and has adequate air flow around the unit, and is free from excessive dust, corrosive fumes and conductive contaminants. Please place the UPS away from other units at least 20 cm to avoid interference. Do NOT operate the UPS where the temperature exceeds 0-40° C and the humidity is over 0-90 % RH.



II: Connect to Utility and Charge

Plug in the AC input cord to the 2-pole, 3-wire grounded wall outlet. For the best results, we suggest charging the battery at least 6 hours with no load (no electrical devices such as computers, monitors, etc.) connected before initial use. The unit charges its battery while connecting to the utility.



III: Connect the Loads

Plug in the loads to output receptacles on the rear panel of the UPS. Simply turn on the power switch of UPS unit, and devices connected to the UPS will be protected by UPS unit.



Do not attach a power strip or surge suppressor to the UPS.

IV: Connect LAN cable, Modem or Phone line for Surge Protection

Connect for example a single modem or phone line into surge-protected "IN" outlet on the back panel of the UPS unit. Connect from "OUT" outlet to the computer with another phone line cable.

V: Connect USB Cable

To monitor the UPS status, such as unattended UPS shutdown and start-up, by using bundled software, please connect the UPS and PC with USB cable included.

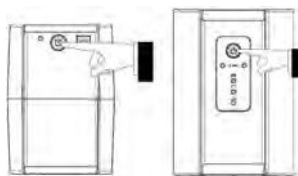 


NEVER connect a **laser printer** or **scanner** to the UPS unit, because **in-rush current generated by motor's devices** may cause the damage of the unit.



VI: Turn On/Off the Unit

Turn on the UPS unit by pressing the power switch. Turn off the UPS unit by pressing again the power switch.



6. Audio Indicator

<u>Audible Alarm</u>	<u>Situation</u>
Sounding every 10 seconds	Battery Mode
Sounding every 1 second	Battery Low
Sounding every 0.5 seconds	Overload
continuous sounding	Faulty

7. Software Installation on your PC

Connected by USB to a PC or notebook, the Software enables communication between the UPS and the computer. The UPS software monitors the status of the UPS, shuts down the system before the UPS is exhausted and can remotely observe the UPS via the Network (enabling users to manage their system more effectively). Upon AC failure or UPS battery low, UPS takes all necessary actions without intervention from the system administrator. In addition to automatic file saving and system shut-down functions, it can also send warning messages via SMS, e-mail etc.

- After the software is successfully installed, the communication with UPS has been established and a green icon will appear in the system tray.
- Double-click the icon to use the monitor software (as above).
- You can schedule UPS shutdown/start-up and monitor UPS status through PC.
- Detail instructions please refer to the e-manual in the software.



Check www.santak.com from time to time to get the latest version of monitoring software.

8. Trouble Shooting

Symptom	Possible Cause	Remedy
No LED display on the front panel.	1. Battery weak.	1. Charge battery up to 6 hours.
	2. Battery defect.	2. Replace with the same type of battery.
	3. Power switch is not pressed.	3. Press the power switch again.
Alarm buzzer beeps continuously when AC supply is normal.	Overload of the UPS.	Verify that the load matches the UPS capability specified in the specs.
When power failure, back-up time is shorten.	1. Overload of the UPS.	1. Remove some non-critical load.
	2. Battery voltage is too low.	2. Charge battery 6 hours or more.
	3. Battery defect due to high temperature operation environment, or improper operation to battery.	3. Replace with the same type of battery.
Mains normal but LED is flashing.	Power cord is loose.	Reconnect the power cord properly.

- If any abnormal situations occur that are not listed above, please call service people immediately.

9. Specifications

Model	BLAZER Pro series				
	600VA	800VA	1000VA	1500VA	2000VA
INPUT					
Voltage	220/230/240 VAC				
Voltage Range	162~290 VAC				
OUTPUT					
Voltage	220 /230/240VAC				
Voltage Regulation	+/-10% (Battery mode)				
Frequency Range	50Hz or 60Hz				
Frequency Regulation	±1Hz (Battery mode)				
Transfer Time	Typical 4-8ms				
Waveform	Modified Sine Wave				
PROTECTION					
Full protection	Discharge, overcharge and overload protection				
ENVIRONMENT					
Humidity	0-90 % RH @ 0° to 40° C (non-condensing)				
Noise Level	Less than 40dB			Less than 45dB	
Software					
Monitoring Software	WinPower				
Model	600VA		800VA		
CAPACITY	600VA / 360W		800VA / 480W		
BATTERY					
Type & Number	12V/7Ah x1		12V/9Ah x1		
Charging Time	2-4 hours recover to 90% capacity				
Backup Time (est. 100W)	16 mins		20 mins		
PHYSICAL					
LED Indicator	Green LED (AC Mode, Backup Mode)				
Outlet and Connector	4x outlets, USB port,RJ11 Surge Protection				
Dimension (DxWxH)	279mm x 100mm x 143mm				
WEIGHT					
Net weight	4.5kg		5.0kg		
Model	1000VA		1500VA		2000VA
CAPACITY	1000VA / 600W		1500VA/900W		2000VA / 1200W
BATTERY					
Type & Number	12V / 7Ah x 2		12V / 9Ah x 2		12V / 9Ah x 2
Charging Time	2-4h to 90% capacity				
Protection	Overload, discharge and overcharge protection				
Backup Time (est. 100W)	40 mins		50 mins		50 mins
PHYSICAL					
LED Indicator	Normal, Battery mode, AC mode, Fault mode				
Outlet and Connector	6x outlets, USB port, RJ45 Surge Protection				
Dimension (DxWxH)	365mm x 139mm x 195 mm				
WEIGHT					
Net weight	8.8kg		10.3kg		10.3kg

SANTAK ELECTRONIC (SHENZHEN) CO.,LTD

No.8 Baoshi Rd, Block 72 Baoan, Shenzhen,
Guangdong, China

www.eaton.com www.santak.com